

**** BHDT Spare Parts List ****

Photo

Part No. & Part Name




560285150/255- Cup Spring



315163080/255- Cup Spring



21267/220- Connector

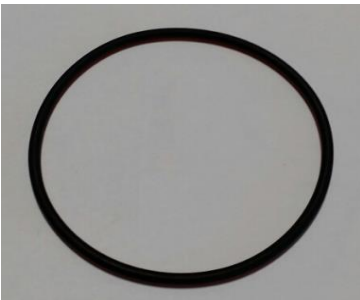

034858/220- O-ring backring 97



CP020034/255- Helical Spring

**** BHDT Spare Parts List ****



CP020033/255- Helical Spring



CP020032/562- Supporting Ring



CP020031/473- Guiding



CP020030/562- Bushing



CP022042/593- Lense

**** BHDT Spare Parts List ****



CP022043/844- Screwing suction



CP022044/844- Screwing suction



CP022045/775- Valve insert



CP020052/220- Safety bolt

**** BHDT Spare Parts List ****



CP022057/075- Clamp ring



DR006001/220- Sealing ring NS 6



**DR012001/220- Sealing ring NS
12**



**DR014001/220- Sealing ring NS
14**

**** BHDT Spare Parts List ****



HT016011/220- Quadring



HT016018/103- Safety bolt



HT022044/103- Retaining Ring



IP016010/780- Back ring

**** BHDT Spare Parts List ****



IP016040/150- Sealing ring



IP016008/527- Bearing bush



HT022004/473- Piston



IP016078/527- Back ring

**** BHDT Spare Parts List ****



IP016089/593- Lense



OR0120030/151- O-ring 12 x 3



OR0043024/151- O-ring 4.3 x 2.4



IP016088/593- Counter Pad

**** BHDT Spare Parts List ****



IP016090/593- Valve seat



OR0140020/151- O-ring 14 x 2



VTS095406/223- Tee 9.5 Vibro



FOCUSING TUBE

**** BHDT Spare Parts List ****



**CP022109/844- Suction valve
compl.**



WJ055026/005- Jet-catcher



**WJ070068/593- Collimation
tube**



WJ070061/591- Valve body



WJ055013/591- Valve body

**** BHDT Spare Parts List ****



XN5/220- Initiator



XS107/220- Face spanner



**CP022047/844- Pressure valve
compl**



**VWS095406/223- High pressure
elbow 9.5 vibro**



XM43/220- Magnet valve G 1/4



VDR095405/261- Sleeve dia 9.5

**** BHDT Spare Parts List ****



TJ006038/220- Straight screw



**VDR095406/261- Thrust collar
9.5 Vibro**



TJ006017/256- Collet




TJ006016/133- Nut



VDS095405/256- Gland nut 9.5

**** BHDT Spare Parts List ****

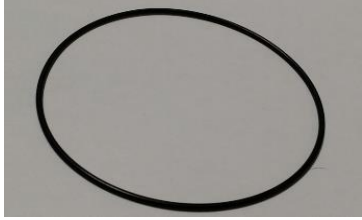

**OR0759017/151- O-Ring 75.92 x
1.78**



TJ006071/555- Bushing



**VDS095406/256- Gland nut 9.5
Vibro**



**VDR064405/261- Thrust collar
6.4**




VDS064405/256- Gland nut 6.4

**** BHDT Spare Parts List ****



VDS064406/261- Sleeve

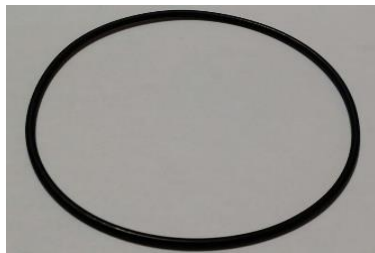

OR0700020/151- O-ring 70 x 2



WJ055017/220- Impact Plate



WJ055023/527- Guide bushing

**** BHDT Spare Parts List ****



WJ070005/551- Valve stem



WJ070008/527- Guide bushing



WJ070009/150- HP gasket



XF29/220- Rod wear ring



XS92/089- Back ring

**** BHDT Spare Parts List ****



PA-6/4/220- Clear hose



WJ070066/527- Support



XST120/220- Rod sealing




XF153/220- guide ring



XA171/799- Scraper

**** BHDT Spare Parts List ****

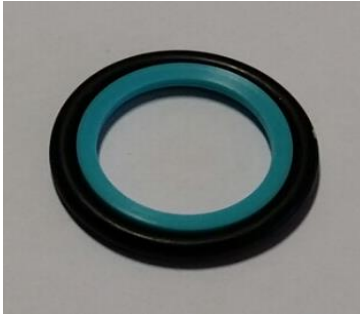

XST17/220- Rod sealing



XK242/220- Piston sealing



XF136/220- Oil filter element 10 um



XNE-8AI/220- Analog



WJ070062/338- Cylinder

**** BHDT Spare Parts List ****



D23M20X65/046- Cylinder head screw



WJ070063/657- Lid



D23M16X55/046- Cylinder head screw



XF58/220- Filter element 5 um



XST9/220- Plug



CP022031/069- Piston

**** BHDT Spare Parts List ****



HT022070/220- HT Seal kit



CP022100/220- Seal Kit for Ecotron



HT022027/527- Bearing Bush



CP022011/150- Sealing Ring



9704521/220- Quadring

**** BHDT Spare Parts List ****



CP022012/780- Back ring



HT022026/255- Disc Spring



HT022032/527- Back ring



K016/220- Ball



XS462-023/220- Hydraulic Hose



**CP022066/220- Plunger
Complete**

**** BHDT Spare Parts List ****



HT022040/779- Hp Cylinder



SM1521/2A/220- Safety Valve



WJ055020/591- Release Valve



VR100222/320- Hp Tube




WJ070060/591- Waterjet Valve



DILM710/220- Contactor

**** BHDT Spare Parts List ****

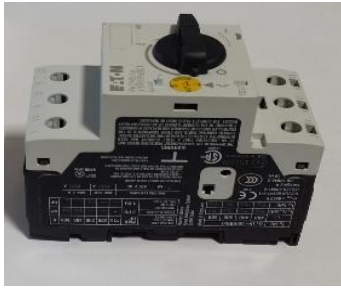

PKZM0-1,6- Relay Switch



CP022040/591- Valve body



**HT016005/220- Plunger
Complete**



XF32/220- Filter Element



XF35/220- Rod wear ring

**** BHDT Spare Parts List ****



CP022059/249- Mounting tool



HT016002/779- HP Cylinder



**HT022008/172- Connection
flange**



TJ006095/220- Dosing Head

**** BHDT Spare Parts List ****



XD25/220- Orifice (Sapphire)



**XDD2590/220- Orifice
(Diamond)**



Abrasive Head



4200837- Reducer




**901245529/220- Temperature
Switch**

**** BHDT Spare Parts List ****



00087060/220- Flexible gear ring

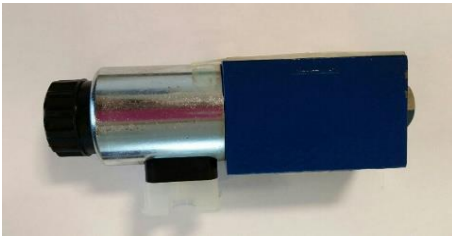

900561180/220- Hydraulic way valve



PT100/220- Temperature Sensor



VR098012/320- Hp Tube 9.5 x 3.2- Hytron



VR080102/320- HD- Rohr DM 9.52 x 3.2- Eco

**** BHDT Spare Parts List ****



**VR105011/320- HP Tube 9.5 x
3.2**



**VR100220/320- Hp Tube 9.5 x
3.2**



**VR105012/320- HP tube 9.5 x
3.2- Servo**




**VR080107/320- HD Rohr DM
9.52 x 3.2**



**VR105007/320- HP Tube 9.5 x
3.2- Servo**

**** BHDT Spare Parts List ****

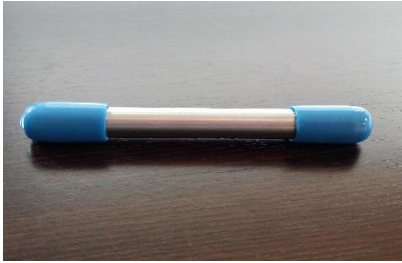

**VR100008/320- HP Tube 9.5 x
3.2- Servo/ Eco/ Hytron**



**VR098010/320- HP tube 9.5 x
3.2- Hytron**



**VR100221/320- HP Tube 9.5 x
3.2**



**1241938/220- Flow control
cartridge**



**VR105014/320- HP tube- 9.5 x
3.2- Servo**

**** BHDT Spare Parts List ****



**VR098011/320- HP tube 9.5 x
3.2- Hytron**




**VR105009/320- Hp Tube 9.5 x
3.2**



**VR080106/320- HD Rohr DM
6.52 x 3.2**



**VR080105/320- HD-Rohr DM
9.52 x 3.2**

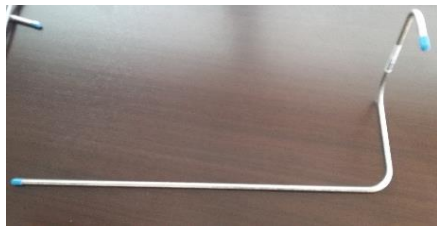

**VR105013/320- Hp tube 9.5 x
3.2- Servo**



**VR100222/320- HP Tube 9.5 x
3.2**

**** BHDT Spare Parts List ****



**VR105010/320- Hp Tube 9.5 x
3.2- Servo**



**VR105007/320- HP Tube 9.5 x
3.2- Servo**



**VR098013/320- HP tube 9.5 x
3.2- Hytron**




**VR100219/320- HP Tube 9.5 x
3.2**



**VR080103/320- HD Rohr DM
9.52 x 3.2- Eco**

**** BHDT Spare Parts List ****

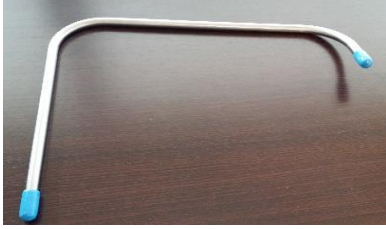

**VR080102/320- HD- Rohr DM
9.52 x 3.2- Eco**



**VR080101/320- HD- Rohr DM
9.52 x 3.2- Eco**



**VR105008/320-HP Tube 9.5 x 3.2-
Servo**



**VR105017/320- HP tube 9.5 x
3.2- Servo**



WJ070028/256- Collet



WJ100037/152- HP Connection


**** BHDT Spare Parts List ****



WJ070027/133- Adjusting Nut



002002005/220- Fluid Level Gauge

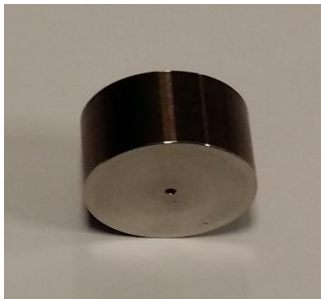


WJ070400/168- Valve seat for Cutting Head



WJ070350/593- Collimation Tube



XG19/220- Filter housing with R 3/4" BSP

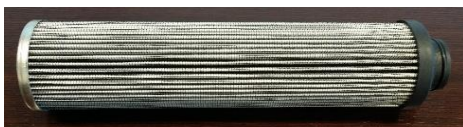

XF135/220- Oil Filter- Hytron & Ecotron 40 Series

**** BHDT Spare Parts List ****



CP022018/563- Flange



CP022039/563- Flange



CP022019/563- Flange



HT022006/563- Flange


**** BHDT Spare Parts List ****



28040050/220- Shim Ring



HT022033/591- Valve body

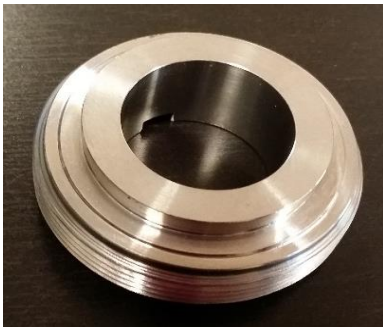

CP022021/593- Thread Ring

**** BHDT Spare Parts List ****



**NT64MSM12/220- Level Switch-
temperature sensor without
screen**